




# Kit 301 Diagram

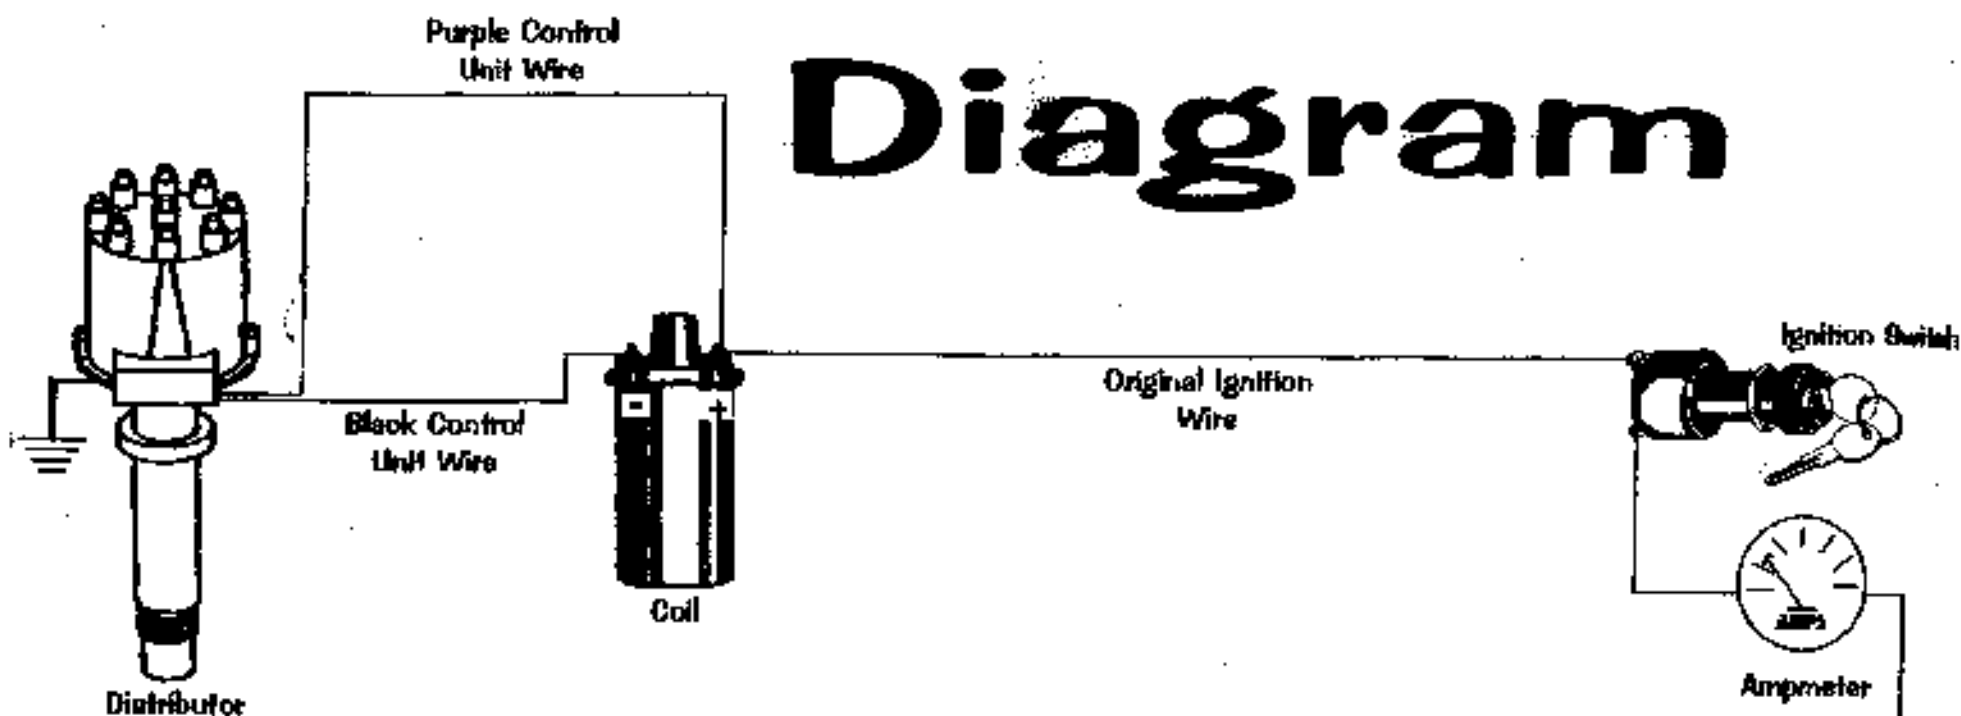

Most marine applications use a ballast resistor in the primary circuit. This ballast resistor is generally mounted on the coil bracket or within several inches of the coil. If your ignition system contains a ballast resistor or a resistance wire it should be removed to allow full voltage to be applied to the coil positive (+) terminal.

